


Solid State Pressure Sensor

ANALOG
OUTPUT

MAP Series – Model 36A Low Pressure

FEATURES

- Low Cost Sensor Element
- Calibrated Span and Offset
- Multi-order Temperature Compensation
- 0.3 PSI to 3.0 PSI
- Differential Pressure

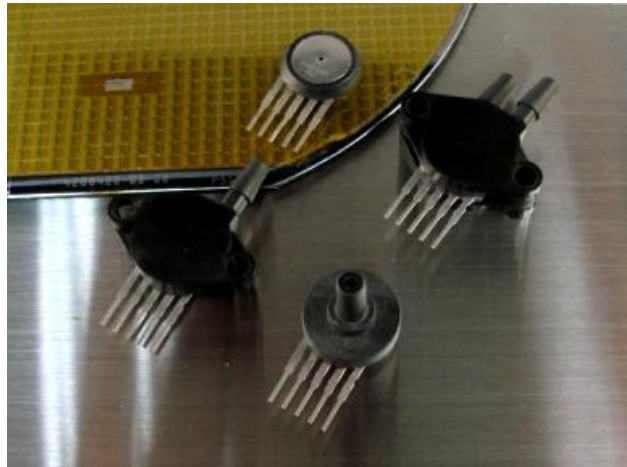

Sold in North America By:
Servoflo Corporation
75 Allen Street
Lexington, MA 02421
Tel: 781-862-9572

DESCRIPTION

The MAP Series is a smart pressure sensor with amplified analog output. Compensation of sensor offset, sensitivity, temperature drift and nonlinearity is accomplished in the factory via the latest ASIC technology with calibration coefficients stored in an on-chip EEPROM.

A variety of output configurations, including resolution, sampling rate and voltage levels are available to provide a simple and ready-to-use solution for a wide range of applications. The low voltage version operates from 2.7 to 3.3V while the regular version operates from 4.5 to 5.5V.

The MAP Series including Models 36A, are available for pressure ranges from 0.3 to 100 psi. Higher pressure ranges (>5psi) are catered for by the MAP 36A STD and CCD series. Custom ranges and calibrations are available. Please contact the factory for details.

www.servoflo.com / info@servoflo.com

Characteristics

Unless otherwise specified, all parameters are measured at 60% RH, 25 °C and 5 Vdc excitation


Parameters	Min	Typ	Max	Unit
Supply Voltage ^{NOTE 1}	2.7 to 3.3		4.5 to 5.5	V
Supply Current			2.5	mA
Pressure Range ^{NOTE 3}	0.3		3.0	psi
Zero Output (Offset)	0.320	0.500	0.680	V
Full Scale Output	4.320	4.500	4.680	V
Accuracy ^{NOTE 2}			4.5	%FS
Response Time		1	2	ms
Linearity	-0.5		+0.5	%FS
Thermal Hysteresis	-0.30		+0.30	%FS
Over Pressure ^{Note 5}			3X or 2.5 psi	Rated Pressure
Temp - Compensated	0		+50	°C
Temp - Operating	-20		+85	°C
Temp - Storage	-40		+125	°C

NOTES:


1. Specify desired operating voltage range when ordering. Output is ratiometric to supply voltage
2. Accuracy includes non-linearity, hysteresis, TCS and TCO inside the compensated temperature range, best fit straight line definition
3. Wetted materials contain PPA, Silicone gel (Port A) and PPA, RTV, glass and silicon (Port B)
4. See ordering guide for list of available pressure ranges
5. Whichever is greater

Dimensions


Button (No Port)

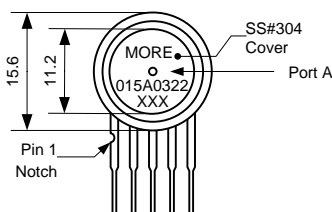

Delivery : 15 pcs per tray

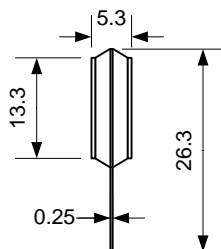


All dimensions are in mm

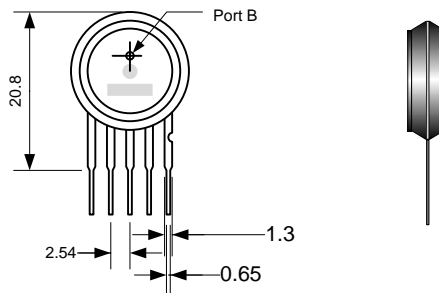

Notes:

1. Port B is used for positive differential
2. Port A is used for absolute
3. Port B is used for gage
4. All dimension are in mm
5. Soldering leads max. 250 °C 5s

Opposing Ports

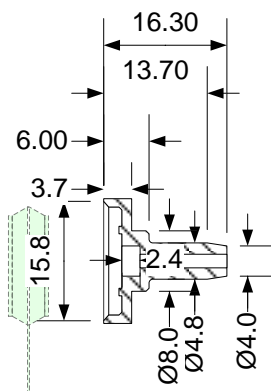

Port Options 1,3,5: Either one or both Vertical Port add-ons


Delivery : 15 pcs per tray

Pin #	Description
1	N.C.
2	Vdd.
3	Output
4	Vss
5	N.C.

NOTE:


N.C. pins must be left floating
A 0.1uF capacitor must be connected between VDD and VSS

Parallel Ports

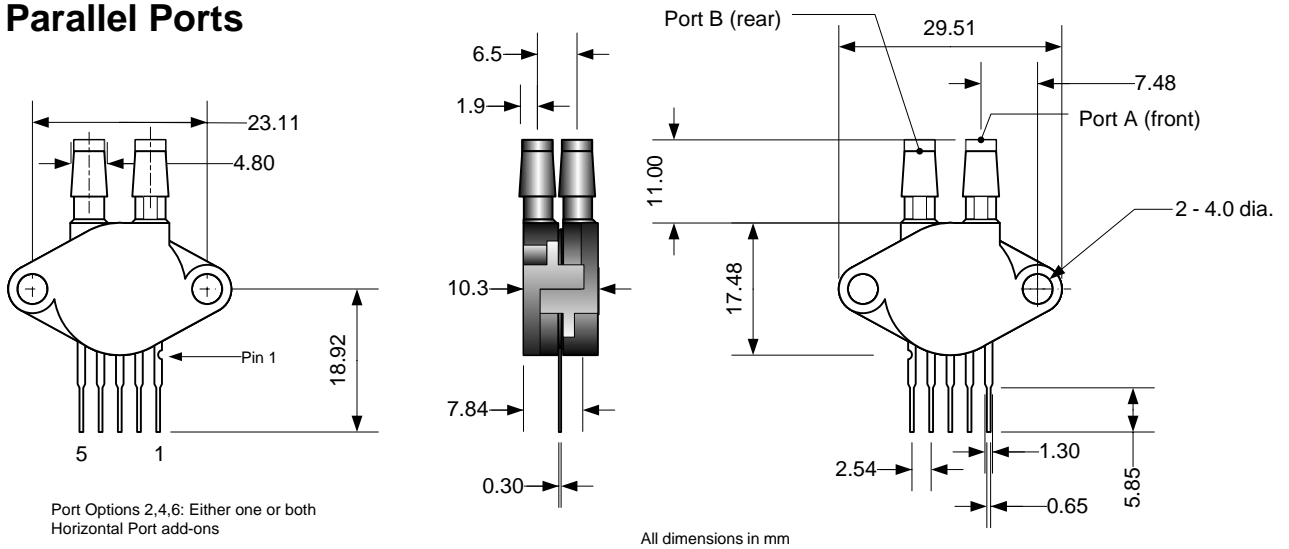

Delivery : 10 pcs per tray

Ordering Information

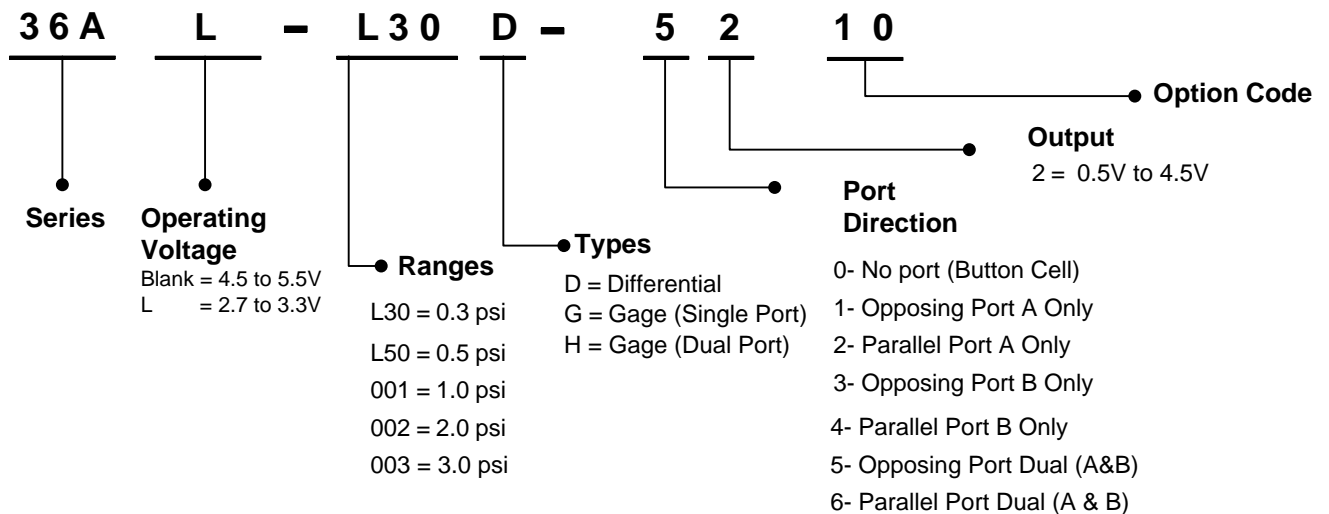

Note:

- 1) To specify single ended pressure (one side is always more +ve than the other) specify gage pressure with Dual port configuration (pressure type H). The device can be used for differential pressure by simply connecting the reference port (Port B) to the reference pressure instead of atmosphere.
- 2) Specifying Differential pressure means a +/- pressure range.

Example:

Part number 36A L30 D 52 20 corresponds to an output of 2.5V (@ 0 psi) +/- 2V (@ +/- 0.3 psi)
Part number 36A L30 G 52 20 corresponds to an output of 0.5V (@ 0 psi) to 4.5V (@ 0.3 psi)

Disclaimer/Warranty/Notice

Sensormate Enterprise Co. Ltd products are not authorized for use in applications where failure could result in loss of life or injury. While Sensormate provides application assistance personally, through our literature and website, it is the responsibility of the customer to determine the suitability of the product for the intended application.

All information provided is believed to be accurate at the time of publishing however Sensormate Enterprise Co. Ltd reserves the right to make changes without prior notice.

Sensormate Enterprise Co.Ltd warrants its products to be free of manufacturing defects for a period of 12 months from the date of purchase. The maximum liability, expressed or implied shall be limited to a direct replacement of those products Sensormate finds defective. The foregoing is the Buyers Sole remedy in lieu of all other warranties, expressed or implied including those of merchantability and fitness for a particular purpose.

The rest of this page has been left intentionally blank

Sold in North America By:

Servoflo Corporation

75 Allen Street

Lexington, MA 02421

Tel: 781-862-9572

www.servoflo.com / info@servoflo.com



10, Industries E. Rd. III, Lukang,
Chang Hua, Taiwan 50544
Tel: +8864 7811839 Fax: +8864 7811837
www.smate.com.tw

Ver 1.11 26-Dec-16